

MODEL 603 INSTRUCTIONS FOR OPERATION.


Note: Requires v4.01 or greater of the blueRailways App for remote operation.



INPUT SHOULD BE 240V AC 50Hz.
OUTPUT SHOULD BE BETWEEN 8V
AND 16V (IDEALLY 12V-15V) AND
CURRENT OF MORE THAN 1 Amp

IMPORTANT.
**DO NOT USE AN ELECTRONIC
TRACK CLEANER.**

IMPORTANT.
KEEP ISOLATED.
THE OUTPUT MUST **NOT** BE
CONNECTED TO THE INPUT OR
DAMAGE MAY RESULT.

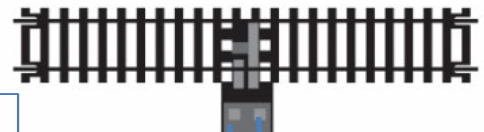

INPUT IS NOT POLARISED. CONNECT
EITHER WAY ROUND.

ON IF OUTPUT IS CONTROLLER BY A
REMOTE DEVICE I.E. SMARTPHONE.
WILL FLASH IF IN LOCAL CONTROL
AND REQUIRES ZEROING OF THE
KNOB AFTER CHANGING DIRECTION.

ON IF DC POWER IS CONNECTED.

WILL FLASH IF TRANSMITTING
BLUETOOTH ADVERTISING PACKETS.
ON IF BLUETOOTH IS CONNECTED.

INTENSITY WILL REFLECT THE
OUTPUT VOLTAGE TO THE TRACK.
WILL GLOW GREEN FOR FORWARDS
AND ORANGE FOR REVERSE.

KNOB CONTROLS OUTPUT TO THE
TRACK IN LOCAL MODE ONLY.

CENTER TO ENABLE REMOTE CONTROL.
FWD OR REV ENABLES LOCAL CONTROL.

